


## USING THE T30 TRANSMITTER

1. Make sure there are two charged AA batteries in the transmitter. If batteries are not installed, see *Battery Information* on page 10.
2. Plug the microphone cord into the "Mic" jack on top of the Transmitter.


**FIG. 3: T30 TRANSMITTER TOP VIEW**

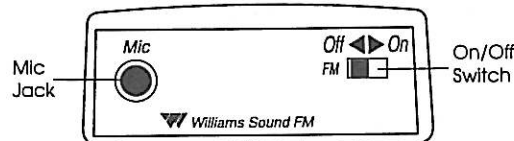

3. Place the Transmitter in the belt clip case provided.
4. Turn the power switch on top of the Transmitter to "On."
5. Clip the microphone onto a collar, lapel, or tie. It should be as close to the speaker's mouth as is practical. (See Figure 4.)

The transmitter can be placed in a pants pocket, or clipped onto a belt or waistband. Make sure the Transmitter is turned OFF when not in use.

**FIGURE 4: CORRECT MICROPHONE PLACEMENT**

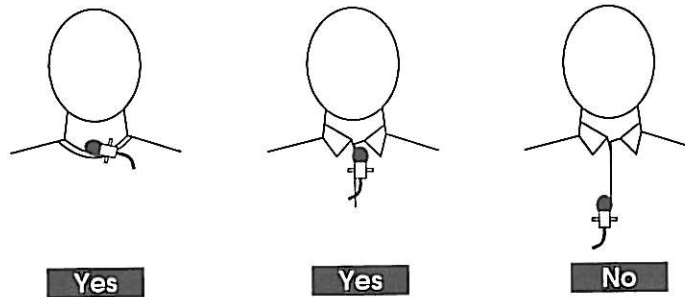

The PFM System 300/350 comes with an omnidirectional, lapel-clip style microphone. It should be clipped to a collar, lapel, tie, or neckline as close to the mouth as possible and centered on the body as shown.

### **Note On The Transmitter Antenna:**

The microphone cord is the transmitting antenna. Do not bunch up the cord or wrap it around the transmitter. For maximum range, the cord should hang as straight as possible.